


Montážní(y) návod 81.

Assembly instructions 81.
Montageanleitung 81.

| | |
|---------------|--|
| S 2 80 03 L | H-RH S, H-RC L S, H-ROL M S |
| S 2 80 03 P | H-RH S, H-RC P S, H-ROL M S |
| S 3 80 07 L | H-RL S, H-RC 2 L S, H-ROL V S |
| S 3 80 07 P | H-RL S, H-RC 2 P S, H-ROL V S |
| SPR 80 40 P | H-E PRC 4 P S, H-E RH 4 P S, H-E RC 4 P S, H-ROL E S, H-R 400 800 30 |
| SPR 80 40 L | H-E PRC 4 L S, H-E RH 4 L S, H-E RC 4 L S, H-ROL E S, H-R 400 800 30 |
| SPR 80 60 P P | H-E PRC 6 P P S, H-E RH 6 P S, H-E RC 6 P S, H-ROL E S, H-R 400 800 30 |
| SPR 80 60 P N | H-E PRC 6 P N S, H-E RH 6 P S, H-E RC 6 P S, H-ROL E S, H-R 400 800 30 |
| SPR 80 60 L P | H-E PRC 6 L P S, H-E RH 6 L S, H-E RC 6 L S, H-ROL E S, H-R 400 800 30 |
| SPR 80 60 L N | H-E PRC 6 L N S, H-E RH 6 L S, H-E RC 6 L S, H-ROL E S, H-R 400 800 30 |

| | | | |
|----------------|------|--------------|------|
| H-RH S | 2 ks | H-ERH 4 L S | 4 ks |
| H-RL S | 6 ks | H-ERH 6 P S | 6 ks |
| | 6 ks | | 6 ks |
| | 1 ks | | 1 ks |
| | 1 ks | | 2 ks |
| | 2 ks | | 1 ks |
| | 1 ks | | 1 ks |
| H-ROL V S | 3 ks | H-ROL E S | 3 ks |
| H-ROL M S | 3 ks | | 3 ks |
| H-E RC 4 L/P S | 4 ks | H-RC 2 L/P S | 8 ks |
| H-E RC 6 L/P S | 4 ks | | 2 ks |
| H-RC L/P S | 2 ks | | 4 ks |
| | 4 ks | | |

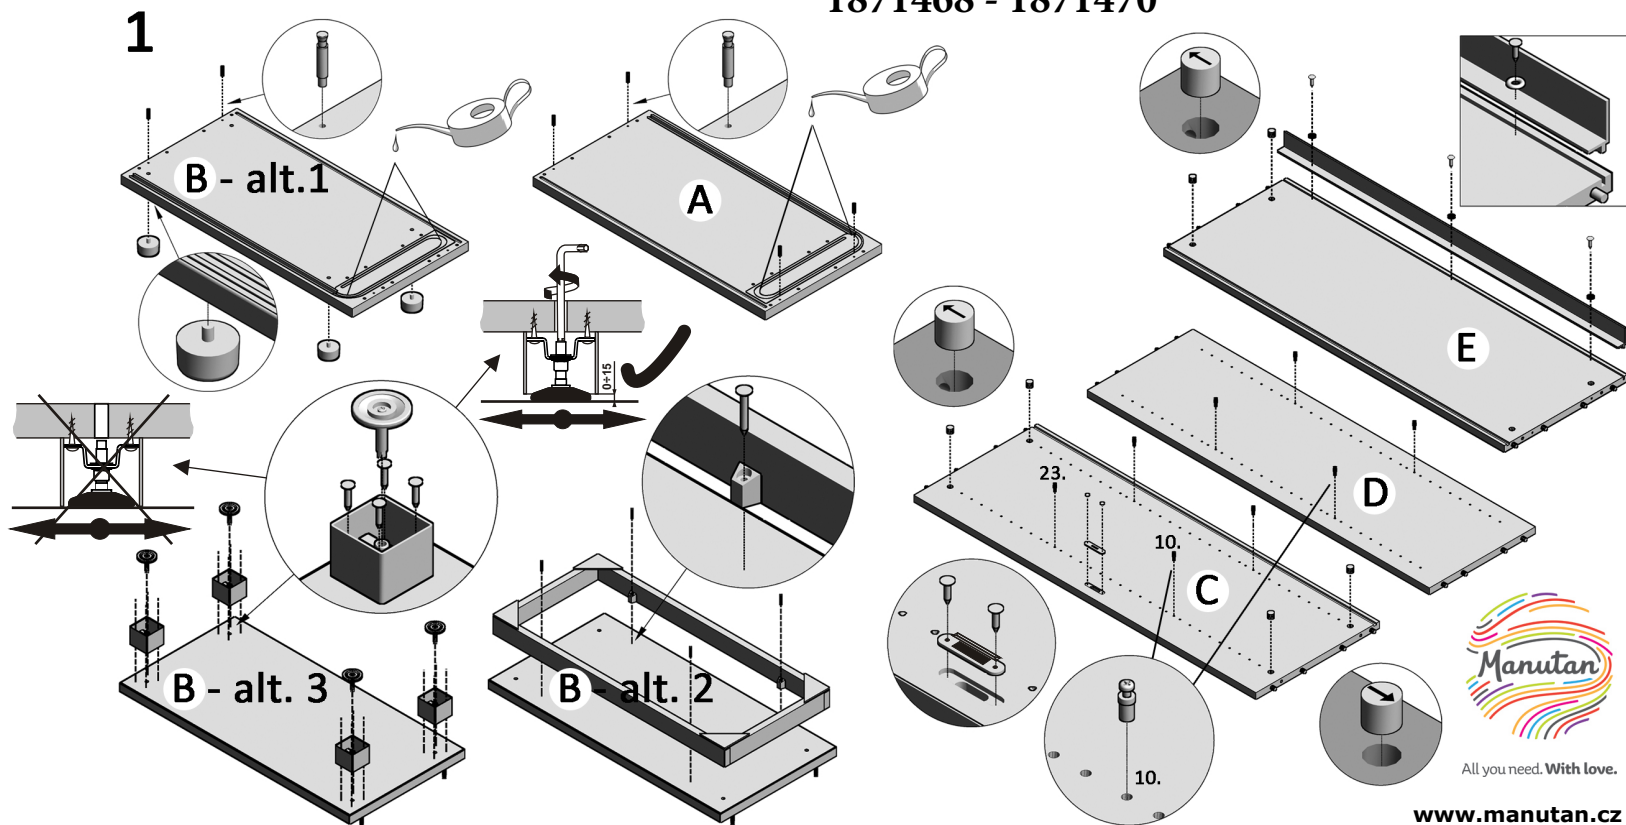

All you need. With love.

www.manutan.cz

www.manutan.hu

www.manutan.pl

www.manutan.sk

