


PRODUCT SHEET

Flex Wall Large

FLW-L

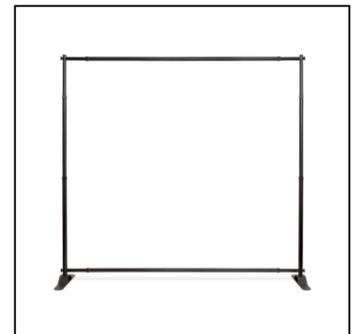


- Adjustable in height and width with telescopic poles
- Lightweight system, easy to transport and move around
- A great advertising backwall suitable for every budget

PRODUCT SHEET

Flex Wall Large

FLW-L

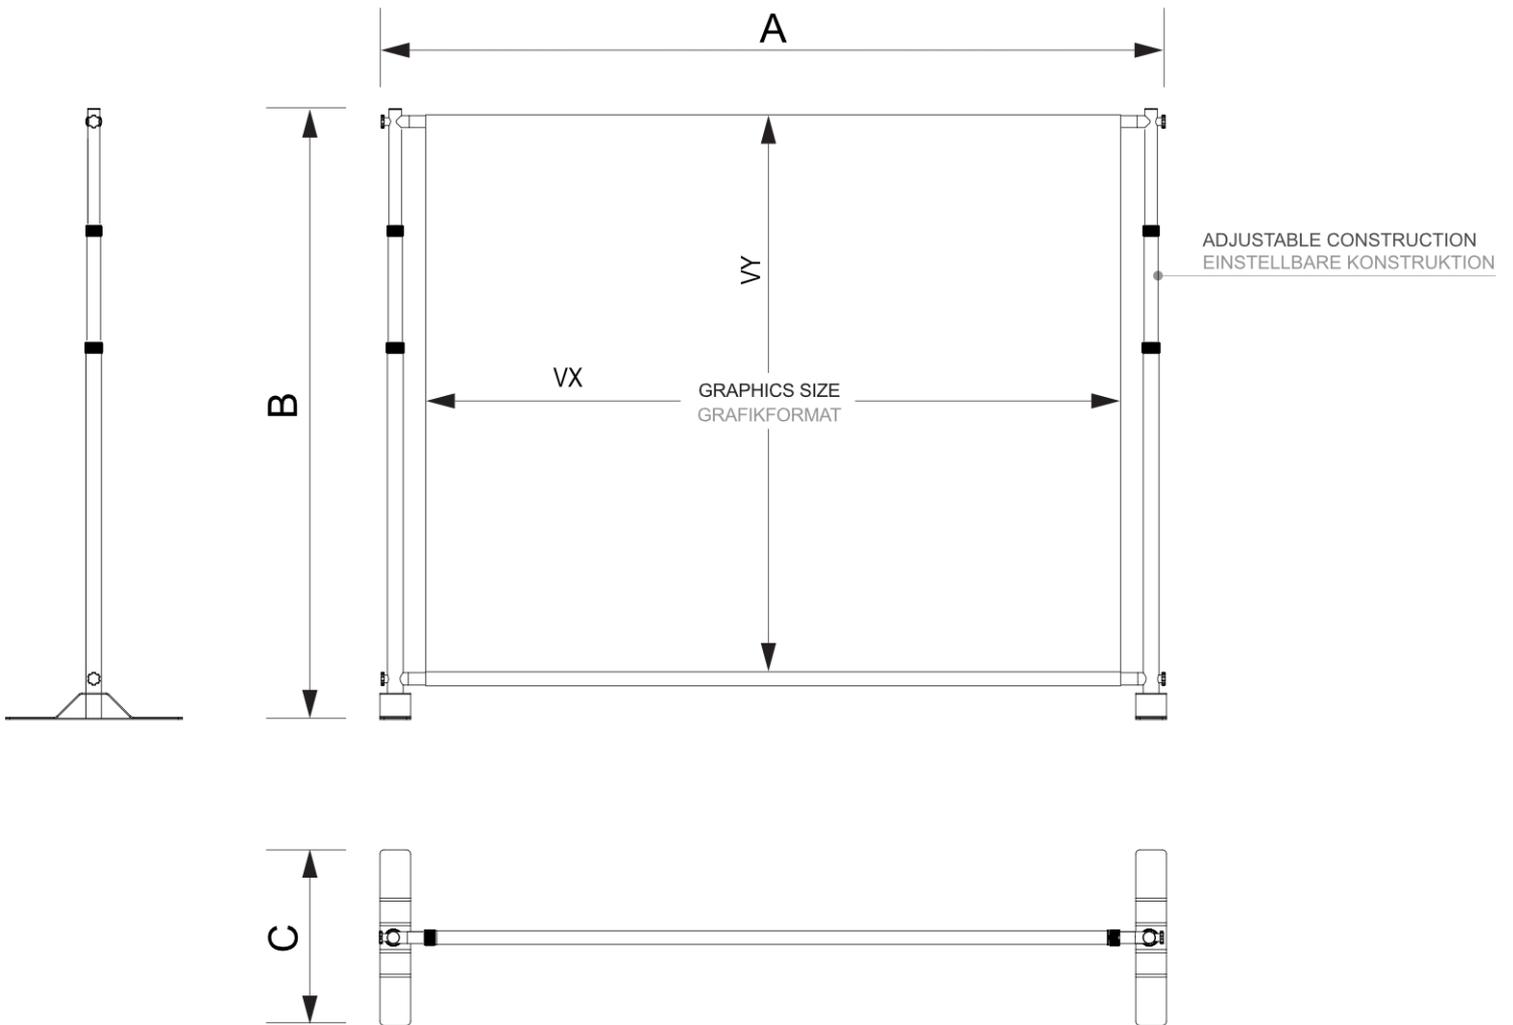

PRODUCT SHEET

Flex Wall Large

FLW-L

GENERAL INFO

SKU	Sizes (mm) (A x B x C)	Format (mm)	Visible size (mm) (VXxVY)	Hole spacing (mm) (XxY)
FLW-L	3120 x 2505 x 440	3000 x 2350 mm	3000 x 2350 mm	-

Orientation	Weight (kg)
Vertical	6,74

ELECTRICAL INFORMATION

Illumination	Lighting colour (K)	Luminosity (cd)	Light intensity (lx)	Wattage (W)
No	-	-	-	-

PACKAGING INFORMATION

Packaging unit 1 (mm)	Packaging unit 2 (mm)	Packaging unit 3 (mm)
1060 x 230 x 110	-	-

Palette number of pieces	Palette weight (kg)	Palette type
48	427	-

ADDITIONAL INFORMATION


Product certifications	EAN
No	8596052144615

ASSEMBLY INSTRUCTIONS

Flex Wall Large

FLW-L


- 1 Open the bag and take out all the pieces.

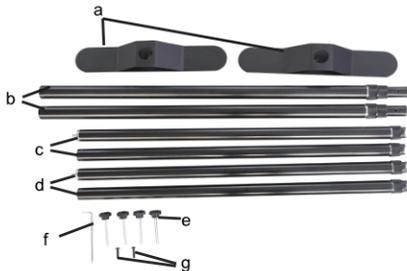


a.Feet (x 2) b.Vertical pole (x 2) c.Lower horizontal piece (x 2)
d.Upper horizontal piece (x 2) e.Screw A (x 4) f.Allen wrench
g.Screw B (x 2)

PS: Plastic arch degree of "d" is clearly larger than that of "c"


- 2 Insert vertical pole into the feet and fix by screw B.

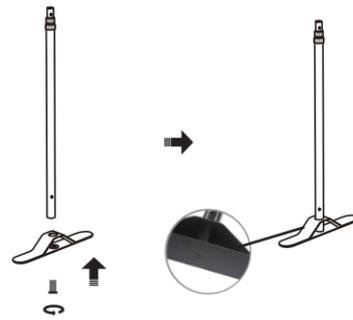


- 3 Screw on two upper horizontal pieces, and do the same to the lower horizontal pieces.

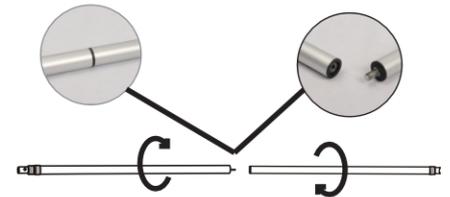


- 4 Slide the upper horizontal pole through top pole pocket on the banner.

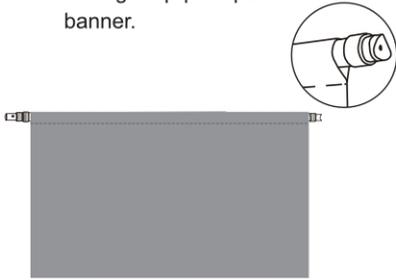


- 5 Fix upper horizontal pole by screw A.

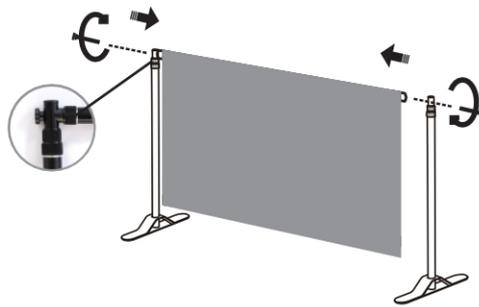


- 6 Slide the bottom horizontal pole through bottom pole pocket on the banner and fix it just like step 5.

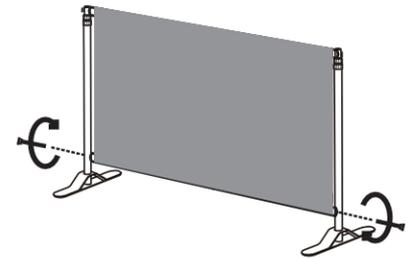

- 7 Loosen the telescoping clamps on the vertical poles, adjust the banner to be well displayed, then tighten the clamps.

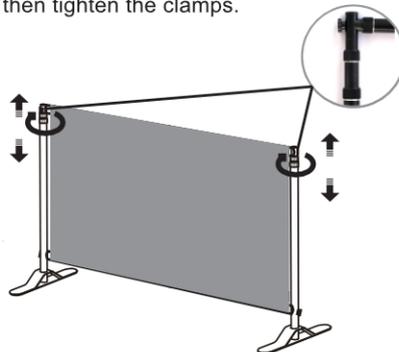

- 8 Then you have it.

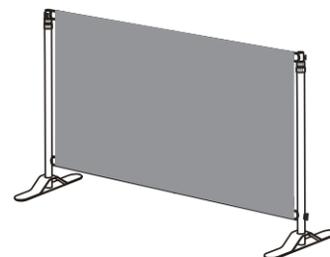

Disassemble in the reverse order.

Caution: Make sure the graphic is folded neatly and save it in bag after using, to avoid wrinkle.

... FLEXWALL