

MONTAGEANLEITUNG



Version 16.6

Modell-Nr.

12570

ART.-NR. FRONT KORPUS

12572

Rot
(ähnl. RAL 3002)

Silber

12577

Ultramarinblau
(RAL 5002)

Silber

12576

Silber

Schwarz
(RAL 9005)

Friedrich Küpper GmbH
Friedrich-Küpper-Weg
54570 Berlingen
Deutschland

Telefon +49 (0) 65 91 - 95 42 0
Telefax +49 (0) 65 91 - 95 42 17
E-Mail info@friedrich-kuepper.de
Internet www.friedrich-kuepper.de

EINZELTEILE / PIECES

2× (A)



772 mm × 475 mm

Art.-Nr. E0154 (Silber/silver)
Art.-Nr. E0155 (Schwarz/black)

2× (B)



772 mm × 475 mm

Art.-Nr. E0165 (Silber/silver)
Art.-Nr. E0166 (Schwarz/black)

2× (C)



548 mm × 473 mm

Art.-Nr. E0173 (Silber/silver)
Art.-Nr. E0172 (Schwarz/black)

2× (D)



548 mm × 473 mm

Art.-Nr. E0173 (Silber/silver)
Art.-Nr. E0172 (Schwarz/black)

2× (E)



474 mm × 480 mm

Art.-Nr. E0194 (Silber/silver)

1× (K)



403 mm × 468 mm

Art.-Nr. E0230 (Silber/silver)
Art.-Nr. E0227 (Rot/red)
Art.-Nr. E0229 (Blau/blue)

1× (L)



400 mm × 25 mm

Art.-Nr. E0233 (Silber/silver)
Art.-Nr. E0234 (Schwarz/black)

6× (J)



450 mm × 120 mm

Art.-Nr. E0224 (Silber/silver)

6× (X)



450 mm × 20 mm

Art.-Nr. E0252 (Schwarz/black)

6× (H)



450 mm × 445 mm

Art.-Nr. E0215 (Silber/silver)

6× (I)



470 mm × 130 mm

Art.-Nr. E0221 (Silber/silver)
Art.-Nr. E0218 (Rot/red)
Art.-Nr. E0220 (Blau/blue)

1× (Y)



1700 mm × 600 mm

Art.-Nr. E0257 (Silber/silver)

1×






20 mm × 55 mm

Art.-Nr. E0951

BEUTELINHALT / BAG CONTENT


 8× 5,5 × 19 mm Art.-Nr. E0284	 14× KU 4 × 16 mm Art.-Nr. E0285	 24× M5 × 10 mm Art.-Nr. E0286	 24× ø 5,3 mm Art.-Nr. E0287	 24× M5 Art.-Nr. E0288	 48× M4 × 10 mm Art.-Nr. E0289
 48× M4 Art.-Nr. E0290	 1× Art.-Nr. E0292	 1× Art.-Nr. E0291	 8× Art.-Nr. E0293	 8× Art.-Nr. E0294	 8× M8 Art.-Nr. E0295
 1× Art.-Nr. E0297	 2× Art.-Nr. E0298	 6× Art.-Nr. E0296			

BENÖTIGTES WERKZEUG / NEEDED TOOLS

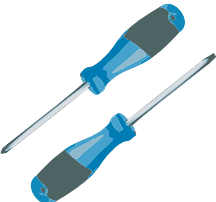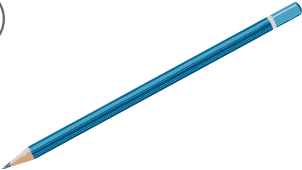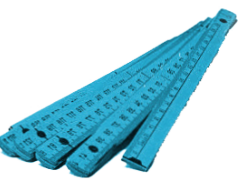1  PH 1 × 100 PH 2 × 100	2  SW 7 SW 8	3  4 mm
4 	5 	7 
8 		

1. 2x M5 2x M5 x 10 2x 5,3 MM

② SW 8 ① PH 2 x 100

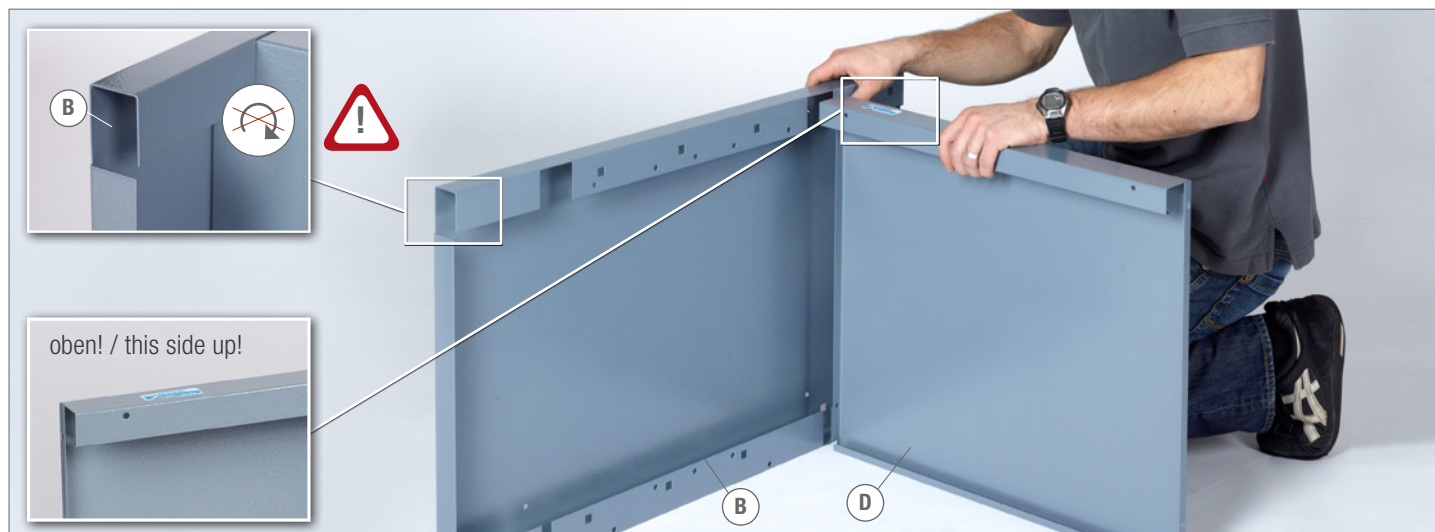

2. 2x M5 2x M5 x 10 2x 5,3 MM

② SW 8 ① PH 2 x 100



3. 2x M5 2x M5x10 2x 5,3 MM

② SW8 ① PH2x100



4. 6x M5 6x M5x10 6x 5,3 MM ② SW8 ① PH2x100



5. 4x M8 4x ⑤



WIEDERHOLEN SIE DIE SCHRITTE 1 – 6 / REPEAT STEPS 1 – 6

6. 2 × KU4 × 16



1 ×

① PH2 × 100



7. 6 × CL 6 × CR



8.




9.

12x M4

12x M4 x 10

② SW7

① PH1 x 100

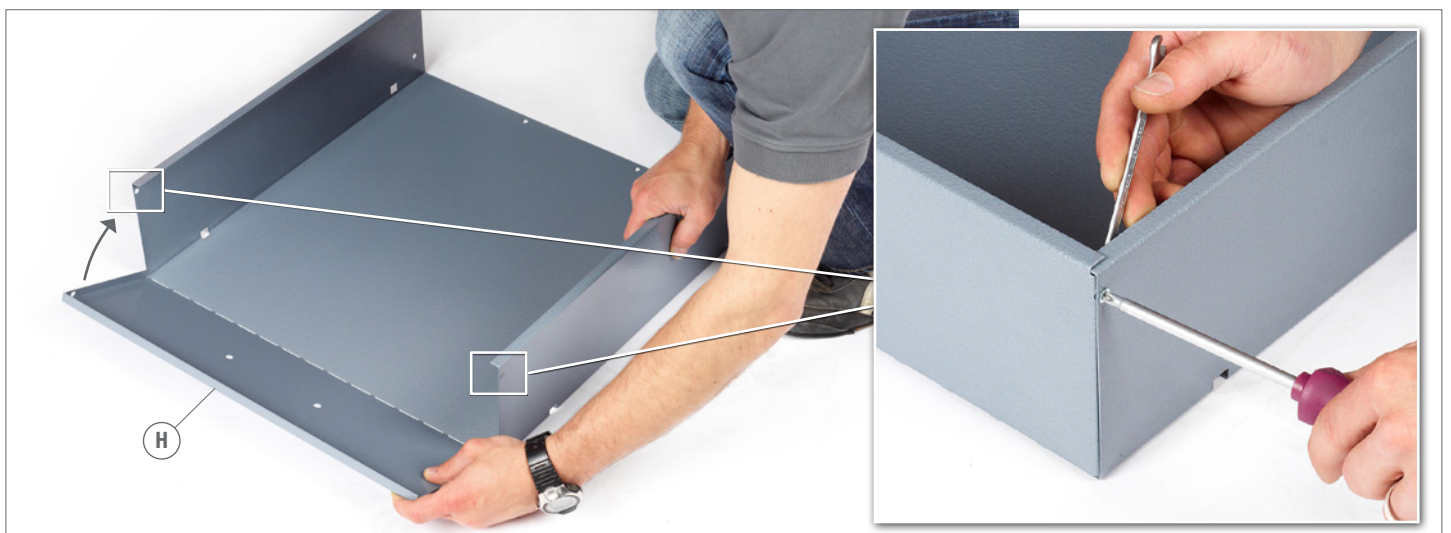


10.

36x M4

36x M4 x 10

②  SW7



①  PH1 x 100

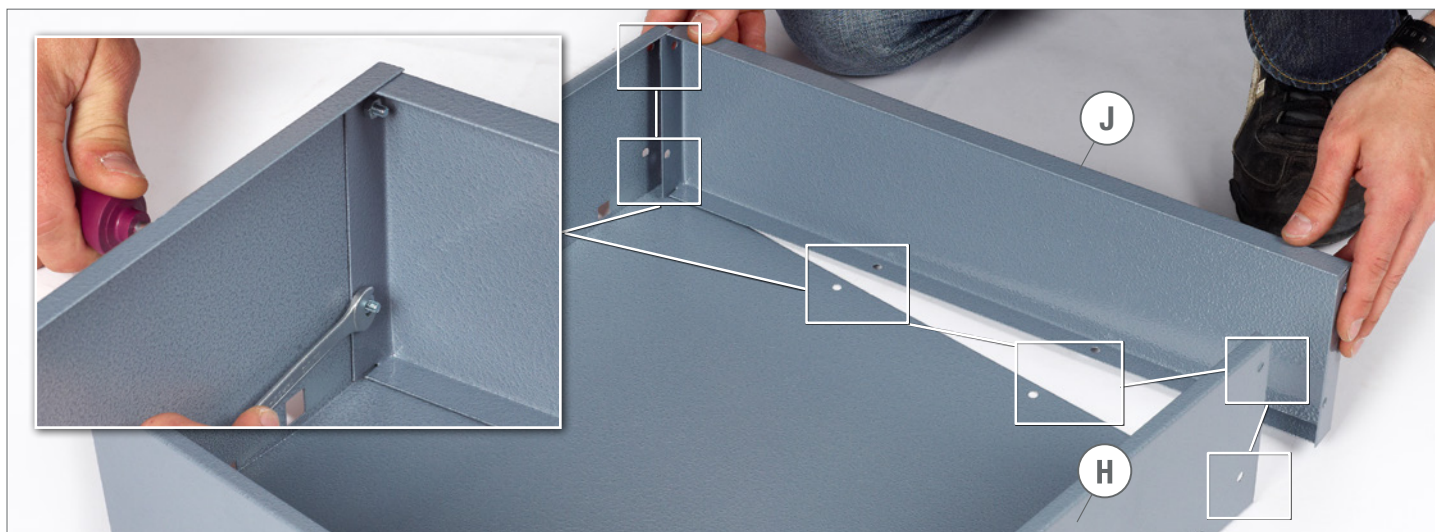

11.

6x DL

6x DR

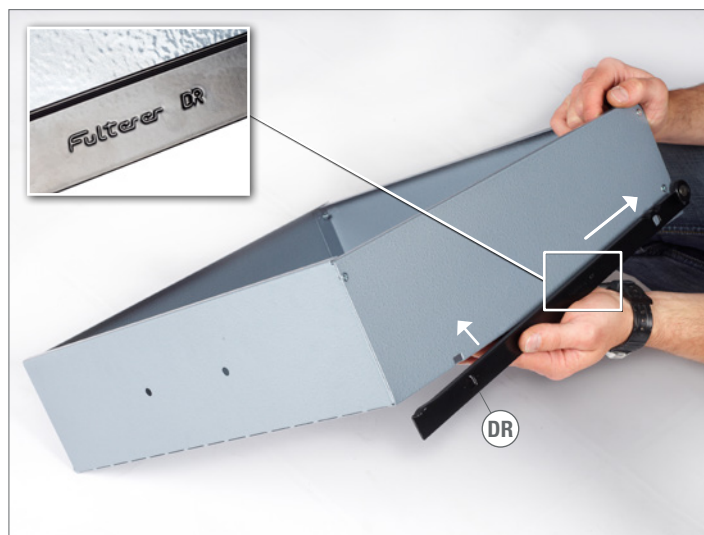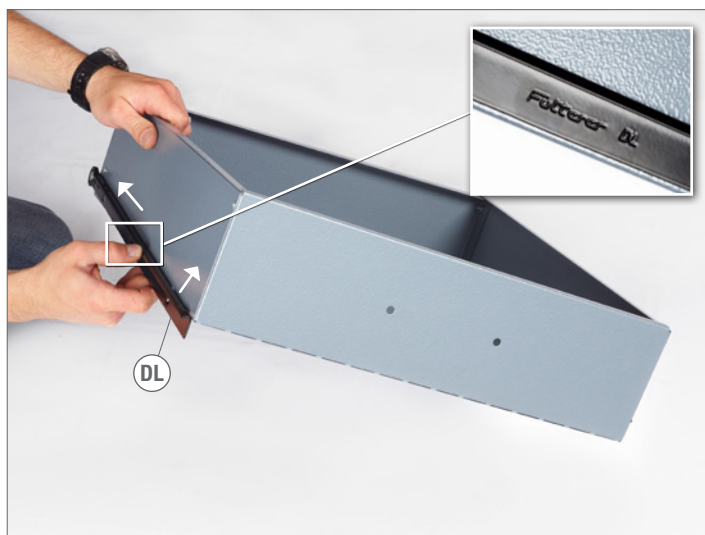

12.

12x KU 4x 16

6x 

①  PH2 x 100



13.



14.



15.




16.

8 x 5,5 x 19



17.

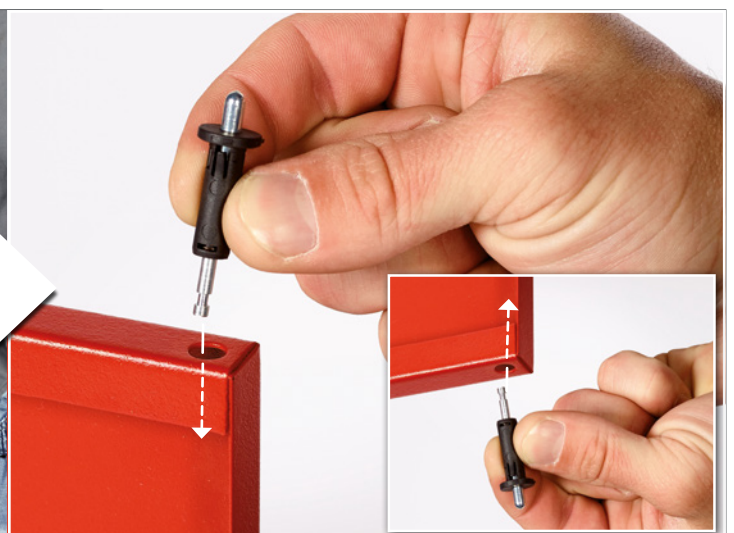


18.



19.



20.

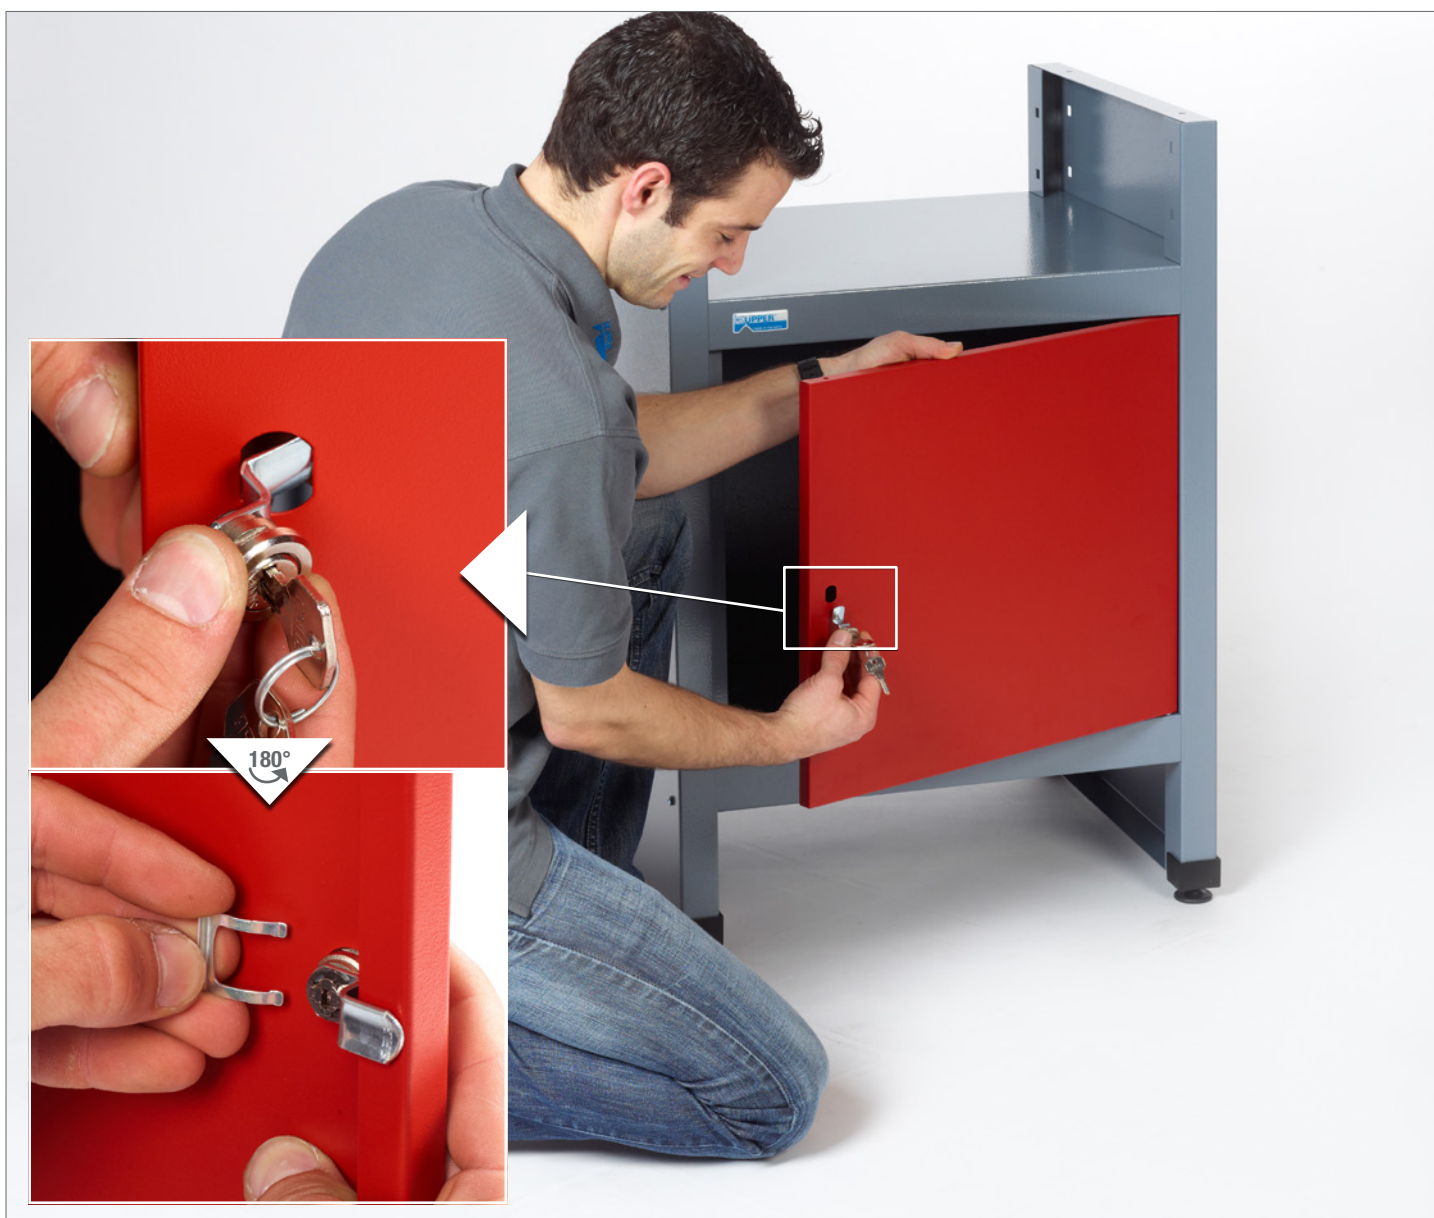

21.



